


## 2. 各部の名称と設定

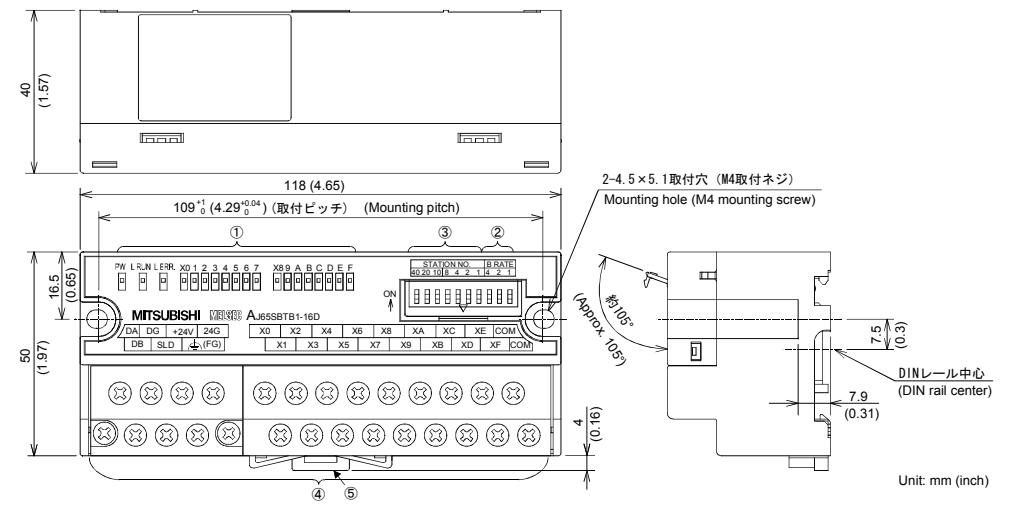

## 2. Part Names and Settings

No.	名称	内 容
①	動作表示 LED	LED名 確認内容 PW 点灯：電源 ON 消灯：電源 OFF L RUN 点灯：交信正常時 消灯：交信断続（タイムオーバエラー） L ERR. 点灯：交信エラーワン 一定間隔で点滅： 通電中に局番設定／伝送速度設定スイッチの設定を変更したとき 不定間隔で点滅： 終端抵抗の設定が違っているとき ユニット CC-Link 専用ケーブルがノイズの影響を受けているとき 消灯：交信正常時 X0～F 点灯：入力 ON 消灯：入力 OFF
	② 伝送速度 設定	設定値 設定スイッチ状態 伝送速度 4 OFF OFF 1 0 OFF OFF OFF 156 kbps 1 OFF OFF ON 625 kbps 2 OFF ON OFF 2.5 Mbps 3 OFF ON ON 5.0 Mbps 4 ON OFF OFF 10 Mbps 伝送速度は必ず上記の範囲で設定してください。
	③ 局番設定 スイッチ	STATION NO. の “10”, “20”, “40” で局番の 10 の位を設定します。 STATION NO. の “1”, “2”, “4”, “8” で局番の 1 の位を設定します。 局番は必ず 1～64 の範囲で設定してください。（*1） (例) 局番を “32” に設定するときは、下記のようにスイッチ設定を行います。 局番 十の位 一の位 40 20 10 8 4 2 1 32 OFF ON ON OFF OFF ON OFF
	④ 端子台	入力ユニット電源、伝送、入力信号の接続用端子台です。
⑤ DIN レール用 フック	ユニットを DIN レールに取り付けるときに DIN レール用フックの中心線上を指でカチッと音がするまで押さえます。	

\*1 局番は重複して設定できません。

本マニュアルは再生紙を使用しています。


## AJ65SBTB1-16D 形 CC-Link システム小形タイプリモート I/O ユニットユーザーズマニュアル AJ65SBTB1-16D CC-Link System Compact Type Remote I/O Module User's Manual

### ● 安全上のご注意 ● (ご使用前に必ずお読みください)

本製品のご使用に際しては、本マニュアルをよくお読みいただくと共に、安全に対して十分に注意を払って、正しい取扱いをしていただくようお願いいたします。

なお、この注意事項は本製品に関するもののみについて記載したものです。シーケンサシステムとしての安全上の注意に関しては、CPUユニットのユーザーズマニュアルを参照してください。

この●安全上のご注意●では、安全注意事項のランクを「危険」、「注意」として区分しております。

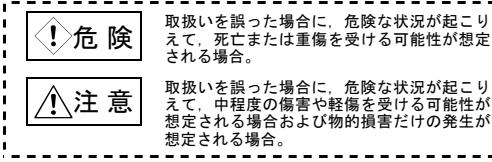

なお、△ 注意に記載した事項でも、状況によっては重大な結果に結びつく可能性があります。


いずれも重要な内容を記載していますので必ず守ってください。  
本マニュアルは必要なときに読めるように大切に保管すると共に、必ず最終ユーザまでお届けいただくようにお願いいたします。

### ● SAFETY PRECAUTIONS ● (Read these precautions before using.)

When using this equipment, thoroughly read this manual. Also pay careful attention to safety and handle the module properly.

These precautions apply only to this equipment. Refer to the CPU module user's manual for a description of the PLC system safety precautions.

These ● SAFETY PRECAUTIONS ● classify the safety precautions into two categories: "DANGER" and "CAUTION".

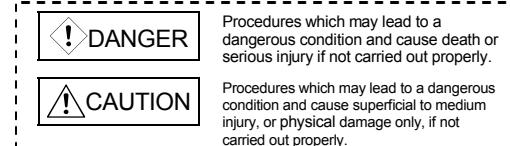

Depending on circumstances, procedures indicated by △ CAUTION may also result in to serious results.

In any case, it is important to follow the directions for usage.  
Store this manual in a safe place so that you can take it out and read it whenever necessary. Always forward it to the end user.

(0705) MEE

### [DESIGN PRECAUTIONS]

#### ! DANGER

- データリンクが交信異常になったとき、交信異常局は次のような状態になります。  
交信状態情報を使って、システムが安全側に働くようにシーケンスプログラム上でインタロック回路を構成してください。  
誤出力、誤動作により事故の恐れがあります。  
リモートI/O局からの入力は、全点OFFします。
- リモートI/Oユニットの故障によっては、入力がON状態またはOFF状態になることがあります。  
重大な事故につながるような入力信号については、外部で監視する回路を設けてください。

#### ! CAUTION

- ユニットは、CPUユニットユーザーズマニュアル記載の一般仕様の環境で使用してください。  
一般仕様の範囲以外の環境で使用すると、感電、火災、誤動作、製品の損傷あるいは劣化の原因になります。
- 制御線や通信ケーブルは、主回路や動力線などと束線したり、近接したりしないでください。100mm以上を目安として離してください。  
ノイズにより、誤動作の原因になります。

### △ 注意

#### 【設計上の注意事項】

#### ! 危険

- ① Operating status indicator LEDs PW: ON: Power supply ON  
OFF: Power supply OFF L RUN: ON: Normal communication  
OFF: Communication shut off (time expiration error) L ERR.: ON: Communication data error  
Flash at regular intervals:  
Indicates that the station number setting or transmission speed setting switch position was changed while power is ON  
Flash at irregular intervals:  
When the setting of the terminal resistor is wrong; when the cable for the module or CC-Link is affected by noise OFF: Normal communication X0 to F: ON: Input ON OFF: Input OFF

- ② Transmission speed setting Setting value Setting switch status Transmission speed 0 OFF OFF OFF 156 kbps 1 OFF OFF ON 625 kbps 2 OFF ON OFF 2.5 Mbps 3 OFF ON ON 5.0 Mbps 4 ON OFF OFF 10 Mbps Be sure to set the transmission speed within the above range.

#### 【取付け上の注意事項】

#### △ 注意

- ③ Station number setting switches Select “10”, “20” or “40” to set the tens place of the station number.  
Select “1”, “2”, “4” or “8” to set the ones place of the station number.  
Always set the station number within the range of 1 to 64.  
(\*1)  
(Example) Set the switches as below when setting the station number to 10:  
Station number Tens place Ones place 40 20 10 8 4 2 1 32 OFF ON ON OFF OFF ON OFF

- ④ Terminal block A terminal block for connection to the power supply, transmission and input signals.
- ⑤ Hook for DIN rail When the module is installed to the DIN rail, push on the center line of the hook for DIN rail with a finger tip until a clicking sound is heard.

#### 【配線上の注意事項】

#### ! 危険

- 配線作業などは、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。  
全相遮断しないと、感電あるいは製品の損傷の恐れがあります。

#### △ CAUTION

- Do not directly touch the module's conductive parts.  
Doing so could cause malfunction or trouble in the module.
- Tighten the module securely using DIN rail or installation screws within the specified torque range.  
Loose terminal screws may cause a short circuit or erroneous operation. If the terminal screws are too tight, it may cause falling, short circuit or erroneous operation due to damage of the screws.

#### 【WIRING PRECAUTIONS】

#### ! DANGER

- Completely turn off the externally supplied power used in the system when installing or placing wiring. Not completely turning off all power could result in electric shock or damage to the product.

## ⚠ 注意

- FG端子はシーケンサ専用の3種接地（第三種接地）以上で必ず接地を行ってください。感電、誤動作の恐れがあります。
- 空き端子ネジは必ず締付けトルク範囲(42~50N·cm)で締付けてください。圧着端子と短絡する原因になります。
- 圧着端子は適合圧着端子を使用し、規定のトルクで締付けてください。先開形圧着端子を使用すると、端子ネジがゆるんだ場合に脱落し、故障の原因になります。
- ユニットの配線は、製品の定格電圧および端子配列を確認した上で正しく行ってください。定格と異なる電源を接続したり、誤配線すると、火災、故障の原因になります。
- 端子ネジの締付けは、規定トルク範囲内で行ってください。端子ネジの締付けがゆるいと、火災や誤動作の原因になります。
- 端子ネジを締め過ぎると、ネジの破損による短絡、誤動作の原因になります。
- ユニット内に、切削や配線クズなどの異物が入らないように注意してください。火災、故障、誤動作の原因になります。
- ユニットに接続する電線やケーブルは、必ずダクトに納める、またはクランプによる固定処理を行ってください。ケーブルをダクトに納めなかったり、クランプによる固定処理をしていないと、ケーブルのブランキや移動、不注意の引っ張りなどによるユニットやケーブルの破損、ケーブルの接触不良による誤動作の原因となります。
- 制御線と通信ケーブルは束縛したり、近接したりしないでください。ノイズにより、誤動作の原因になります。
- ユニットに接続されたケーブルを取り外すときは、ケーブル部分を手に持つて引っ張らないでください。コネクタ付きのケーブルは、ユニットに接続している部分のコネクタを手で持って取り外してください。コネクタなしのケーブルは、ユニットに接続している部分のネジを緩めてから取り外してください。ユニットに接続された状態でケーブルを引っ張ると、ユニットやケーブルの破損、ケーブルの接続不良による誤動作の原因になります。

## 【立上げ・保守時の注意事項】

### ⚠ 危険

- 通電中に端子に触れないでください。感電の原因になります。
- 清掃、端子ネジ、ユニット取付けネジの増し締めは、必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、ユニットの故障や誤動作の原因になります。

### ⚠ 注意

- ユニットの分解、改造はしないでください。故障、誤動作、ケガ、火災の原因になります。
- ユニットは落下させたり、強い衝撃を与えないでください。ユニットの破損の原因になります。
- ユニットの盤への取付け、取外しは必ずシステムで使用している外部供給電源を全相遮断してから行ってください。全相遮断しないと、ユニットの故障や誤動作の原因になります。
- 端子台の着脱は、製品ご使用後、50回以内としてください。(JIS B 3502準拠)
- ユニットに触れる前には、必ず接地された金属などに触れて、人体などに帶電している静電気を放電してください。静電気を放電しないと、ユニットの故障や誤動作の原因になります。

## 【廃棄時の注意事項】

### ⚠ 注意

- 製品を廃棄するときは、産業廃棄物として扱ってください。

## 1. 仕様

項目	内容
入力点数	16 点
絶縁方式	フォトトカプラ絶縁
定格入力電圧	DC24V
定格入力電流	約 7mA
使用電圧範囲	DC19.2~26.4 V DC (ripple ratio: within 5 %)
最大同時入力点数	100%
ON 電圧/ON 電流	14V 以上 / 3.5mA 以上
OFF 電圧/OFF 電流	6V 以下 / 1.7mA 以下
入力抵抗	約 3.3kΩ
応答時間	OFF→ON 1.5ms 以下 (DC24V 時) ON→OFF 1.5ms 以下 (DC24V 時)
コモン方式	16 点 1 コモン (2 点) (端子台形 1 線式)
入力形式	プラス、マイナスコモン共用タイプ (シンク、ソース共用タイプ)

## ⚠ CAUTION

- Always ground the FG terminal.  
There is a risk of electric shock or malfunction.
- Be sure to tighten any unused terminal screws within a tightening torque range (42 to 50 N·cm). Failure to do so may cause a short circuit due to contact with a solderless terminal.
- Use applicable solderless terminals and tighten them with the specified torque. If any solderless spade terminal is used, it may be disconnected when the terminal screw comes loose, resulting in failure.
- Perform correct wiring for the module according to the product's rated voltage and terminal arrangement. Connecting to a power supply different from rating or miss-wiring may cause fire and/or product failure.
- Fix terminal screws securely within the regulated torque. Loose terminal screws may cause fire and/or malfunction.
- If the terminal screws are too tight, it may cause short circuit or erroneous operation due to damage of the screws.
- Make sure foreign objects do not get inside the module, such as dirt and wire chips. It may cause fire, product failure or malfunction.
- Be sure to fix the wires or cables by ducts or clamps when connecting them to the module. Failure to do so may cause damage of the module or the cables due to accidental pull or unintentional shifting of the cables, or malfunctions due to poor contact of the cable.
- Do not install the control lines together with the communication cables, or bring them close to each other. Failure to do so may cause malfunctions due to noise.
- When disconnecting a cable from the module, do not pull on the cable itself. Disconnect cables not fitted with a connector by holding and pulling the cable connector. Disconnect cables not fitted with a connector by removing the screws from the part connected to the module can cause damage to the module or cable, or malfunction due to cable connection faults.

## STARTING AND MAINTENANCE PRECAUTIONS

### ⚠ DANGER

- Do not touch terminals when the power is on. Doing so could cause an electric shock.
- Switch off all phases of the externally supplied power used in the system when cleaning the module or retightening the terminal or module mounting screws. Not doing so could result in electric shock.

### ⚠ CAUTION

- Never try to disassemble or modify module. It may cause product failure, malfunction, fire or cause injury.
- Do not drop or apply any strong impact to the module. Doing so may damage the module.
- Completely turn off the externally supplied power used in the system before mounting or removing the module to/from the panel. Not doing so could result in damage to the product.
- Mounting/removing the terminal block is limited to 50 times after using a product. (IEC61131-2-compliant)
- Always make sure to touch the grounded metal to discharge the electricity charged in the electricity charged in the body, etc., before touching the module. Failure to do so may cause a failure or malfunctions of the module.

## DISPOSAL PRECAUTIONS

### ⚠ CAUTION

- When disposing of this product, treat it as industrial waste.

## 1. Specification

Item	Description
Number of input points	16 points
Isolation method	Photocoupler
Rated input voltage	24 V DC
Rated input current	Approx. 7 mA
Operating voltage range	19.2 to 26.4 V DC (ripple ratio: within 5 %)
Max. simultaneous ON input points	100 %
ON voltage/ON current	14 V or higher/3.5 mA or higher
OFF voltage/OFF current	6 V or lower/1.7 mA or lower
Input resistance	Approx. 3.3 kΩ
Response time	OFF→ON 1.5 ms or lower (when 24 V DC) ON→OFF 1.5 ms or lower (when 24 V DC)
Wiring method for common	16 points/common (2 points) (terminal block 1-wire type)
Input form	Positive/Negative common shared type (sink/source shared type)

## 項目

## 内容

占有局数	1 局 32 点割付け (16 点使用)
I/O ユニット電源	電圧 DC20.4~26.4V (リップル率 5% 以内) 電流 35mA 以下 (DC24V, 全点 ON 時)
ノイズ耐量	DC タイプのノイズ電圧 500Vp-p, ノイズ幅 1μs, ノイズ周波数 25~60Hz のノイズシミュレータによる
耐電圧	DC 外部端子一括→アース間 AC500V 1 分間
絶縁抵抗	DC 外部端子一括→アース間 DC500V 絶縁抵抗抗して 10MΩ 以上
保護等級	IP2X
質量	0.18kg
外部接続方式	通信部, I/O ユニット電源部 7 点 2 ピース端子台 【送信回路, I/O ユニット電源, FG】 M3×5.2 締付けトルク範囲 : 59~88N·cm 適合圧着端子の挿入枚数は 2 枚以内
入出力電源部, 入出力部	18 点直付け端子台 【入出力電源, I/O 信号】 M3×5.2 締付けトルク範囲 : 59~88N·cm 適合圧着端子の挿入枚数は 2 枚以内
ユニット取付けネジ	平座金みがき丸付 M3 ネジ （締付けトルク範囲 : 79~108N·cm） DIN レールでの取付け可 6 方向取付け可
適用 DIN レール	TH35-7.5Fe, TH35-7.5Al (JIS C 2812 に準拠)
適合圧着端子	・ RAV1.25-3 (JIS C 2805 に準拠) 【適合線線サイズ : 0.3~1.25mm²】 ・ V2-MS3 (日本圧着端子製造(株)), RAP2-SSL (日本端子(株)), TGV2-3N (株ニチフ) 【適合電線サイズ : 1.25~2.0mm²】

## Item

## Description

Number of stations occupied	1 station 32 points assignment (use 16 points)
I/O module	Voltage 20.4 to 26.4 V DC (ripple ratio: within 5 %) power supply Current 35 mA or lower (when 24 V DC, all points ON)
Noise durability	DC type noise voltage 500 Vp-p, noise width 1 μs, noise frequency 25 to 60 Hz (noise simulator condition)
Withstand voltage	500 V AC for 1 minute between all DC external terminals and ground
Insulation resistance	10 MΩ or higher, measured with a 500 V DC insulation resistance tester between all DC external terminals and ground
Protection of degree	IP2X
Weight	0.18 kg
External wiring system	Communication part, I/O module power supply part 7-point terminal block (two-piece) 【Transmission circuit, I/O module power supply, FG】 M3×5.2 Tightening torque range: 59 to 88 N·cm Applicable solderless terminals: 2 max.
I/O power supply part, I/O part	18-point direct-mount terminal block 【I/O power supply, I/O signal】 M3×5.2 Tightening torque range: 59 to 88 N·cm Applicable solderless terminals: 2 max.
Module installation screw	M4 screw with plain washer finished round (tightening torque range: 79 to 108 N·cm) Module can be mounted using DIN rail and can be mounted in 6 directions
Applicable DIN rail	TH35-7.5Fe, TH35-7.5Al (conforming to IEC 60715)
Applicable solderless terminal	・ RAV1.25-3 (conforming to JIS C 2805) 【Applicable wire size: 0.3 to 1.25 mm²】 ・ V2-MS3,RAP2-SSL,TGV2-3N 【Applicable wire size: 1.25 to 2.0 mm²】

## 外部接続 (External connection)

